

# TorqPlus EM Motor Brake Kit Installation and Operating Instructions



Actuator Models: All  
Bulletin: 21078- 06/00

This bulletin provides installation and operating information for the TorqPlus EM Motor Brake Kit. Should you have any questions about the controller that are not covered under this bulletin, please contact an authorized Bettis Valve Automation Center or Bettis Electric Division, Mansfield, Ohio U.S.A.

## 1.0 Caution

Electrical shock and/or explosion hazard may exist. To avoid serious personal injury, death, or property damage due to electrical shock and/or ignition of hazardous atmospheres, *turn off all power to the actuator before removing the actuator cover.*

## 2.0 Kit number and model usage

#1420-02	115 Vac for 300/520 series
#15400-02	115 Vac for 500 series
#15800-02	115 Vac for 800 series
#1420-03	230 Vac for 300/520 series
#15400-03	230 Vac for 500/800 series
#15800-03	230 Vac for 500/800 series
#1420-10	12 Vdc for 300/520 series
#15400-10	12 Vdc for 500 series
#15800-10	12 Vdc for 800 series
#1420-11	24 Vdc for 300/520 series
#15400-11	24 Vdc for 500 series
#15800-11	24 Vdc for 800 series

## 3.0 Inspection


Because this optional product is being supplied as a kit, review of the actuator's nameplate and the kit utilization information is recommended to insure compatibility before use.

## 4.0 Documentation

Bettis maintains accurate records on every actuator sold. Completion and transmittal of a Product Modification Report (form #ESO-01) is required.

## 5.0 Cover Removal

Follow section 7.0 in Bulletin #21077 (TorqPlus EM Series Installation and Operating Instructions) supplied with the actuator.

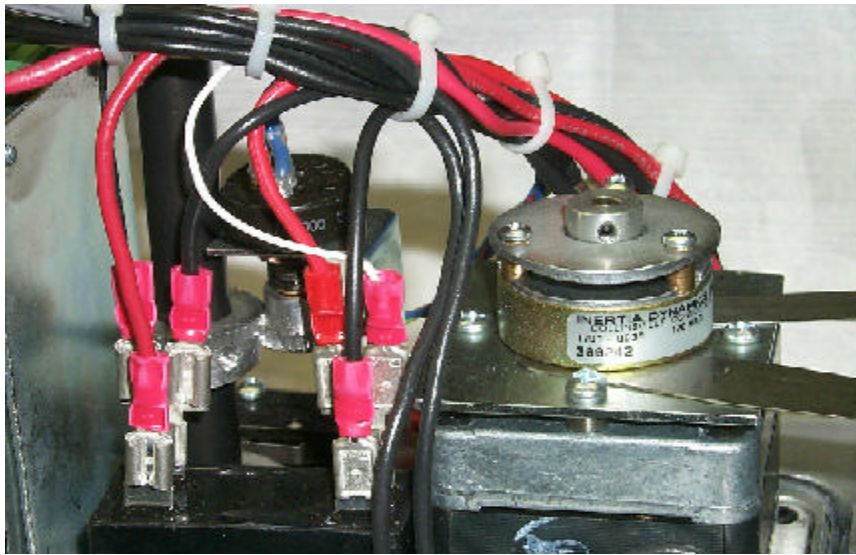


*300 Series, AC Brake Assembly*

## 6.0 Installation Instructions

### 300 Series, AC Actuator (reference photo above)


- Place the brake bracket over the motor shaft and secure using four (4) #6-32 x 3/8 pan head machine screws with lockwashers.
- Place brake onto the bracket and **loosely** secure using three (3) #4-40 x 7/8 pan head machine screws.
- Insert feeler gauges (0.010 to 0.012 in.) between the brake and the bracket.
- Place the brake hub onto the motor shaft with the square portion of the hub inserted tightly into the square of the brake disk.
- Secure the brake hub by tightening the set screws.
- Remove the feeler gauges and tighten the #4-40 screws on the brake.
- Remove the two motor leads from the capacitor.
- Place a “Y” connector on the two empty capacitor terminals and reinstall the motor leads to the proper terminals.
- Install the two leads from the brake to the remaining open terminals of the “Y” connector.

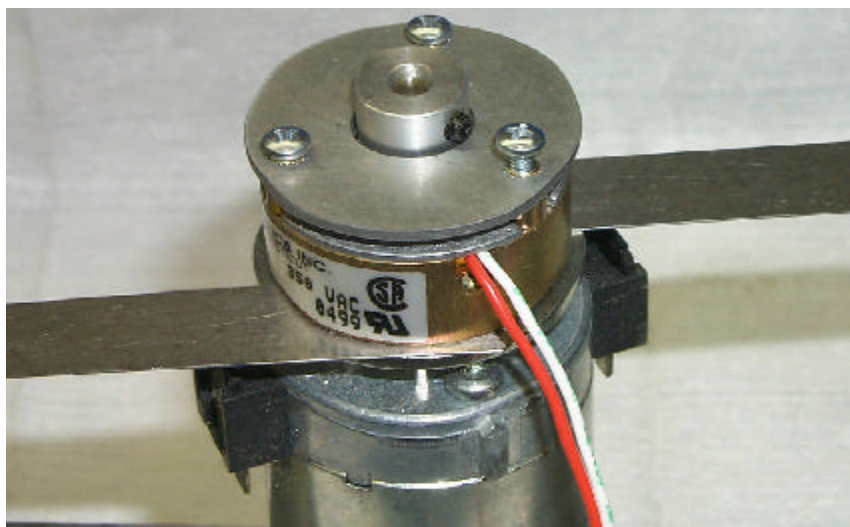

*300 Series, DC Brake Assembly*

### 300 Series, DC Actuator (reference photo bottom page 2)


- Place the brake bracket over the motor shaft and secure using two (2) #2-56 x 3/16 flat head machine screws.
- Place brake onto the bracket and **loosely** secure using three (3) #4-40 x 7/8 pan head machine screws.
- Insert feeler gauges (0.010 to 0.012 in.) between the brake and the bracket.
- Place the brake hub onto the motor shaft with the square portion of the hub inserted tightly into the square of the brake disk.
- Secure the brake hub by tightening the set screws.
- Remove the feeler gauges and tighten the #4-40 screws on the brake.
- Remove the existing three terminal push nut and replace it with a five terminal push nut.
- Install the two leads from the brake, one lead placed into the five terminal push nut and the other lead inserted into terminal 1 on the actuator side.

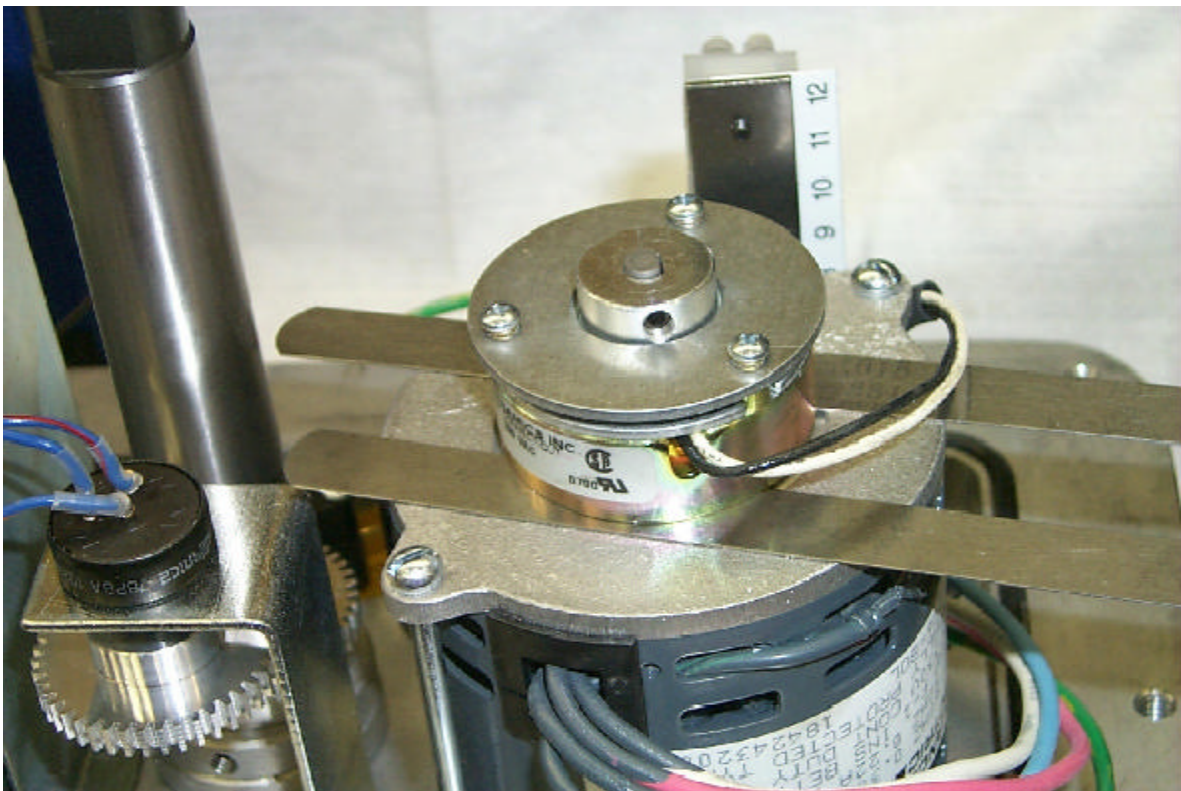

**500/800 Series, AC brake assembly**

### 500/800 Series, AC brake assembly (reference photo above)

- Place the brake onto the motor and **loosely** secure using three (3) #4-40 x 1 pan head machine screws.
- Insert feeler gauges (0.010 to 0.012 in.) between the brake and the motor.
- Place the brake hub onto the motor shaft with the square portion of the hub inserted tightly into the square of the brake disk.
- Secure the brake hub by tightening the set screws.
- Remove the feeler gauges and tighten the #4-40 screws on the brake.
- Remove the two motor leads from the capacitor.
- Place a “Y” connector on the two empty capacitor terminals and reinstall the motor leads to the proper terminals.
- Install the two leads from the brake to the remaining open terminals of the “Y” connector.

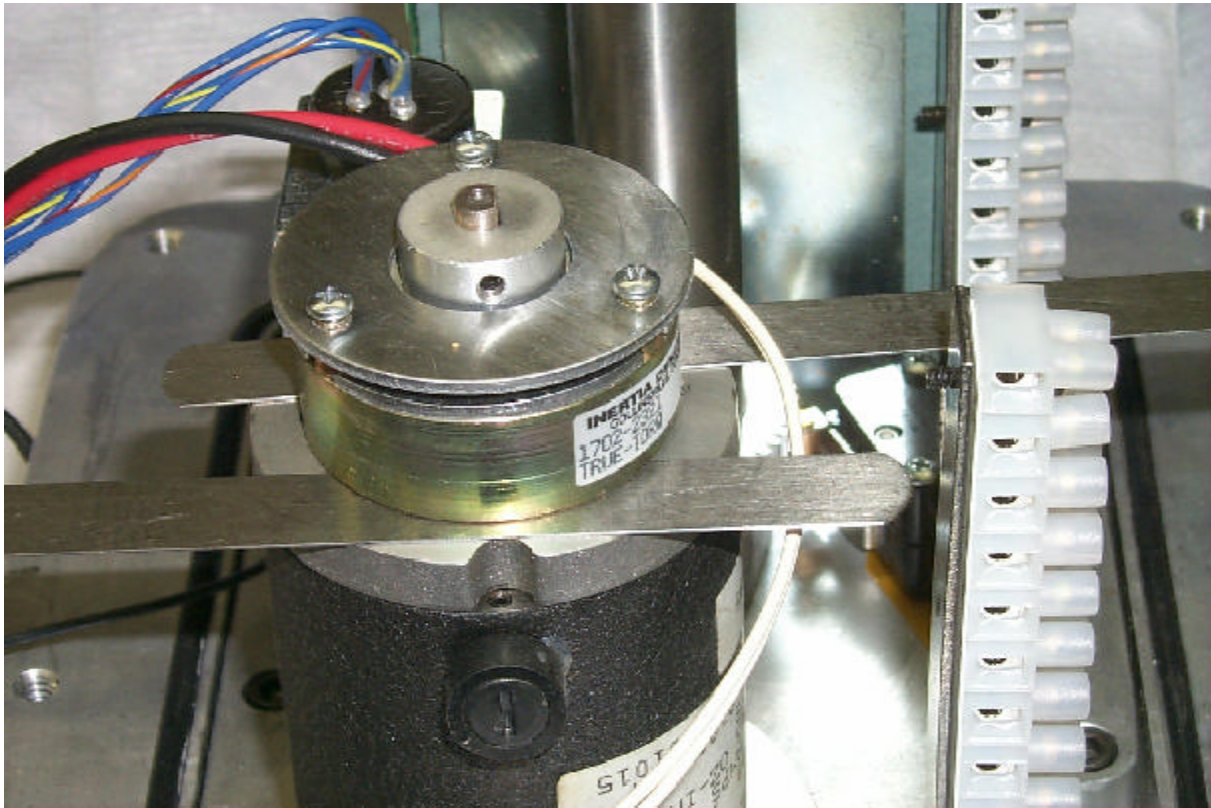

*500/800 Series, DC brake assembly*

**500 Series, DC Actuator (reference photo above)**

- Place brake onto the motor and **loosely** secure using three (3) #4-40 x 1 pan head machine screws.
- Insert feeler gauges (0.010 to 0.012 in.) between the brake and the bracket.
- Place the brake hub onto the motor shaft with the square portion of the hub inserted tightly into the square of the brake disk.
- Secure the brake hub by tightening the set screws.
- Remove the feeler gauges and tighten the #4-40 screws on the brake.
- Remove the existing three terminal push nut and replace it with a five terminal push nut.
- Install the two leads from the brake, one lead placed into the five terminal push nut and the other lead inserted into terminal 1 on the actuator side.

**7.0 Wiring Instructions**

Installation of the kits shall be performed to the proper wiring diagrams. In most cases, the diagram will be WD-0001 for the AC units and WD-0004 for the DC units. Route all wiring carefully so not to make contact with moving parts and secure with wire ties. Wiring and conduit connections must be made in accordance with local and national codes and consistent with good practices.

**8.0 Cover Replacement**

Follow section 9.0 in Bulletin #21077 (TorqPlus EM Series Installation and Operating Instructions) supplied with the actuator.